
IMPORTANT

Before beginning installation, make sure that the sink is the correct model and size and conduct a thorough inspection. It is recommended to inspect sink for damage even if it was previously inspected.


1. Insert pencil through holes on back of sink to mark wall. Alternatively, measure distance between holes and mark wall appropriately. Ensure sink will be anchored to wall studs or reinforced wall for support. 2. Drill mounting holes in wall. 3. Attach faucet and drain to sink. 4. Apply silicone to back of sink.

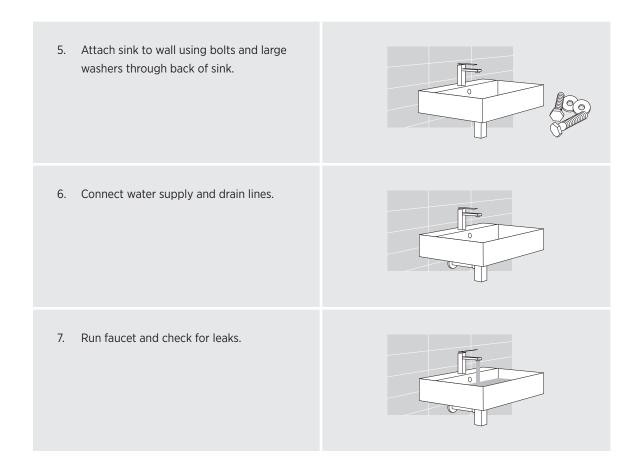

${\it Towel Bar } {\it optional}$

If towel bars are not used, the four screws beneath sink may be discarded.


Unfasten screws on bottom of sink, position towel bar, then secure screws.

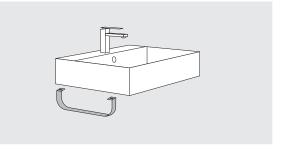



PSQ2018

19%" W x 18¼" D x 4%" H

Available in 5 widths: 20", 24", 32", 40", 48"

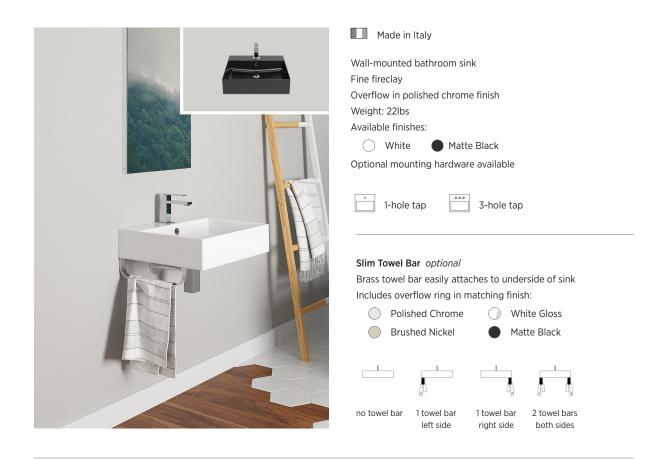




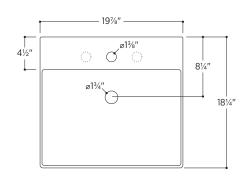



PSQ2418

23¾" W x 18¼" D x 4%" H

Available in 5 widths: 20", 24", 32", 40", 48"

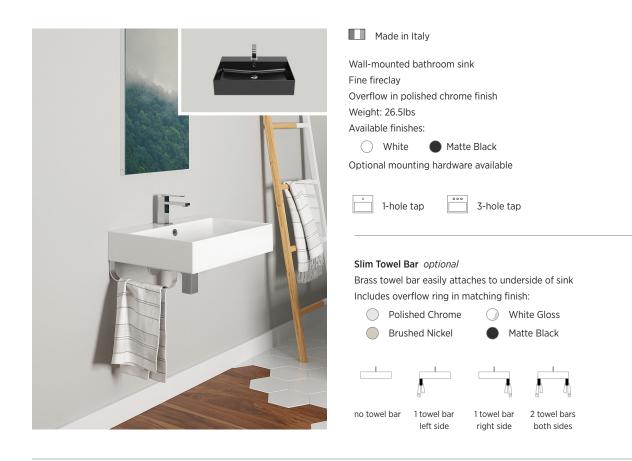




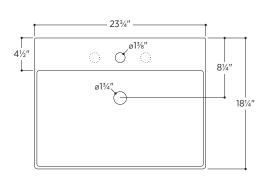


PSQ3218

315/8" W x 181/4" D x 41/8" H

Available in 5 widths: 20", 24", 32", 40", 48"

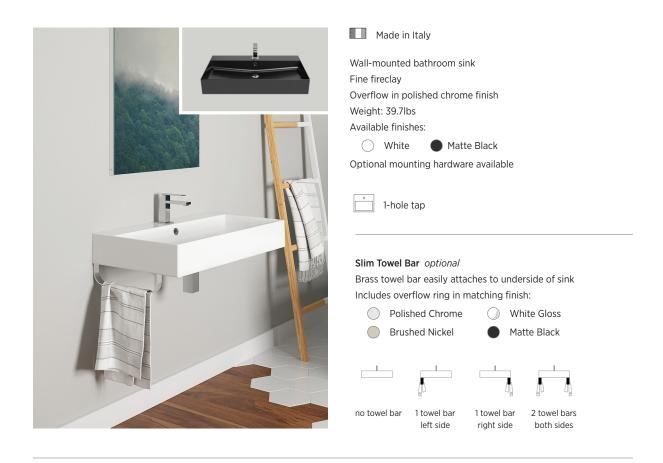


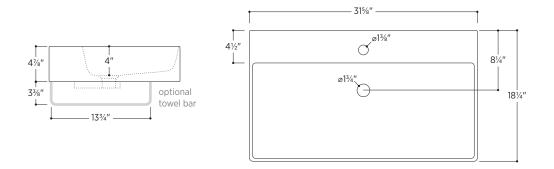


PSQ4018

391/2" W x 181/4" D x 41/8" H

Available in 5 widths: 20", 24", 32", 40", 48"

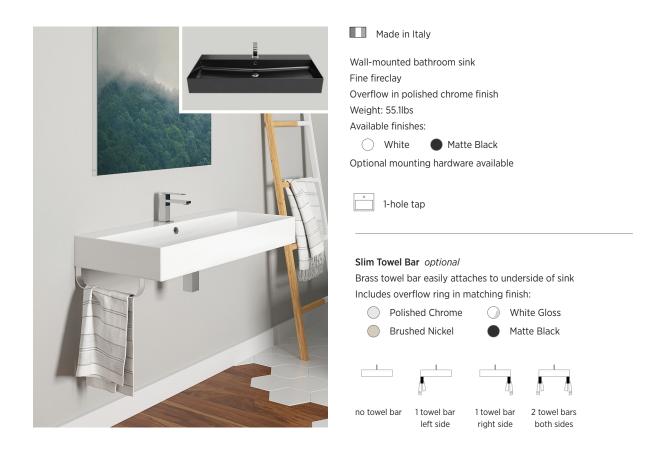


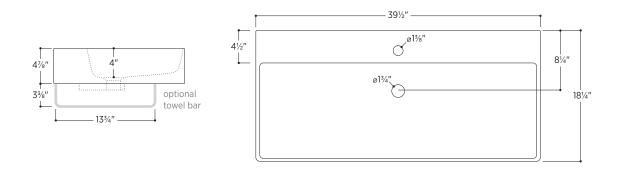


PSQ4818

473/8" W x 181/4" D x 41/8" H

Available in 5 widths: 20", 24", 32", 40", 48"

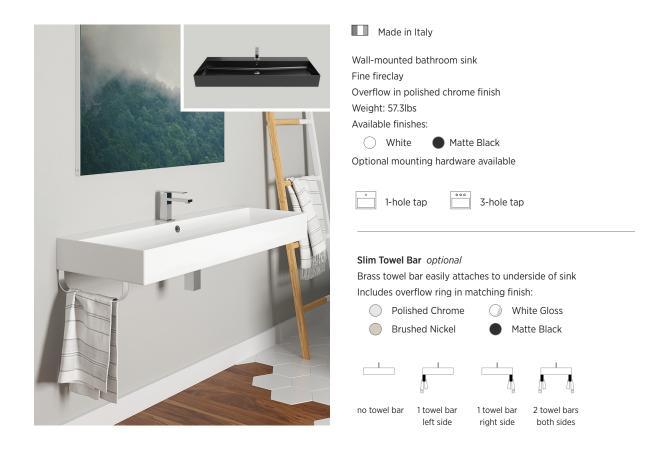

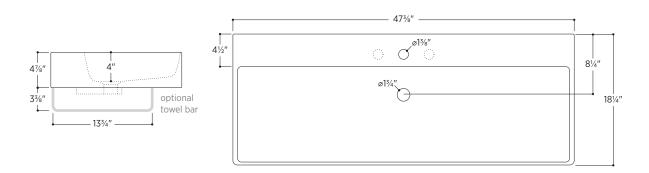

All measurements are approximate and for comparison only. Please note that these dimensions and specifications are subject to change without notice. Our products must be installed by certified professionals only and according to our installation guide, as well as federal, provincial/state and local building codes and regulations.

PERLATO May 2023