

Medicine Cabinet Hanging Instructions

(Hanging hardware included – 4 metal screws, 4 dry wall anchors)

Units that have same shape top and bottom can be flipped 180 deg. so door opens opposite direction

Surface Mount Instructions

What you will need

- Stud Finder
- Pencil
- Level and Tape Measure
- Drill and 3/16" bit
- A second person for assistance

1. Locate studs on your wall using stud finder. Mark these with a pencil.
2. Have your helper hold cabinet against the wall in desired location. If studs do not align with mounting holes, new holes can be drilled in the cabinet to line up with stud, use 3/16" bit. It is recommended that cabinet be anchored to stud with at least two screws. The other two screws can be mounted with dry wall anchors. Use level to make sure cabinet is properly leveled in desired location.
3. Open the cabinet door while it is held against the wall. Make sure there are no obstructions, like faucet or vanity lighting when opening door. Mark the 4 installation holes with the cabinet door open.
4. Place cabinet on wall and drill screws into marked location, anchoring into stud in at least 2 locations, using dry wall anchors for the screws in the other two holes if necessary.


Recessed Mounting Instructions

* Please note we highly recommend professional installation for recessed mounting*


What you will need

- Stud Finder
- Pencil
- Level and Tape Measure
- Utility Knife
- Drill and 3/16" bit
- Keyhole Saw
- A second person for assistance

1. Complete Steps 1 from the surface-mount instructions. If your cabinet is wider than the distance between the studs, consult a professional. Confirm there is no plumbing, wiring or venting before cutting wall.
2. Have your helper hold cabinet against the wall in desired location. Open the cabinet door while it is held against the wall. Make sure there are no obstructions, like faucet or vanity lighting when opening the door. Confirm cabinet is level and outline cabinet with a pencil. Use utility knife to score the outline of cabinet. Use a keyhole saw to cut the marked section and remove drywall.
3. Using a drill with 3/16" bit, drill 4 holes into sidewalls of medicine cabinet. Holes should be at same height as holes on back of cabinet and 1.5" from the back of cabinet.
4. Install a horizontal 2x4" (perpendicular to studs) at base of medicine cabinet. Ensure it is level and screw it into the studs. With your helper, set medicine cabinet in recess with base resting on 2x4". Ensure that the medicine cabinet is set back so the lip is uniformly flush with wall.
5. With uniform depth and cabinet level, drill screws into studs through side wall holes from step 3.

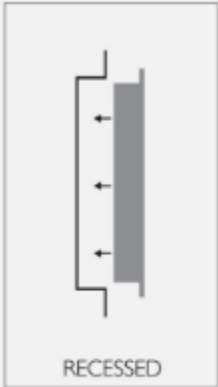

RECESSED

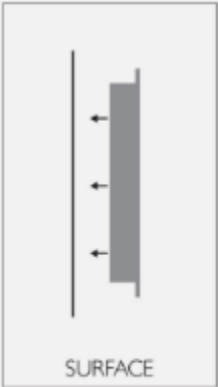

SURFACE

MOUNTING OPTIONS