


CORDLESS ROMAN SHADES



MEASUREMENT GUIDE

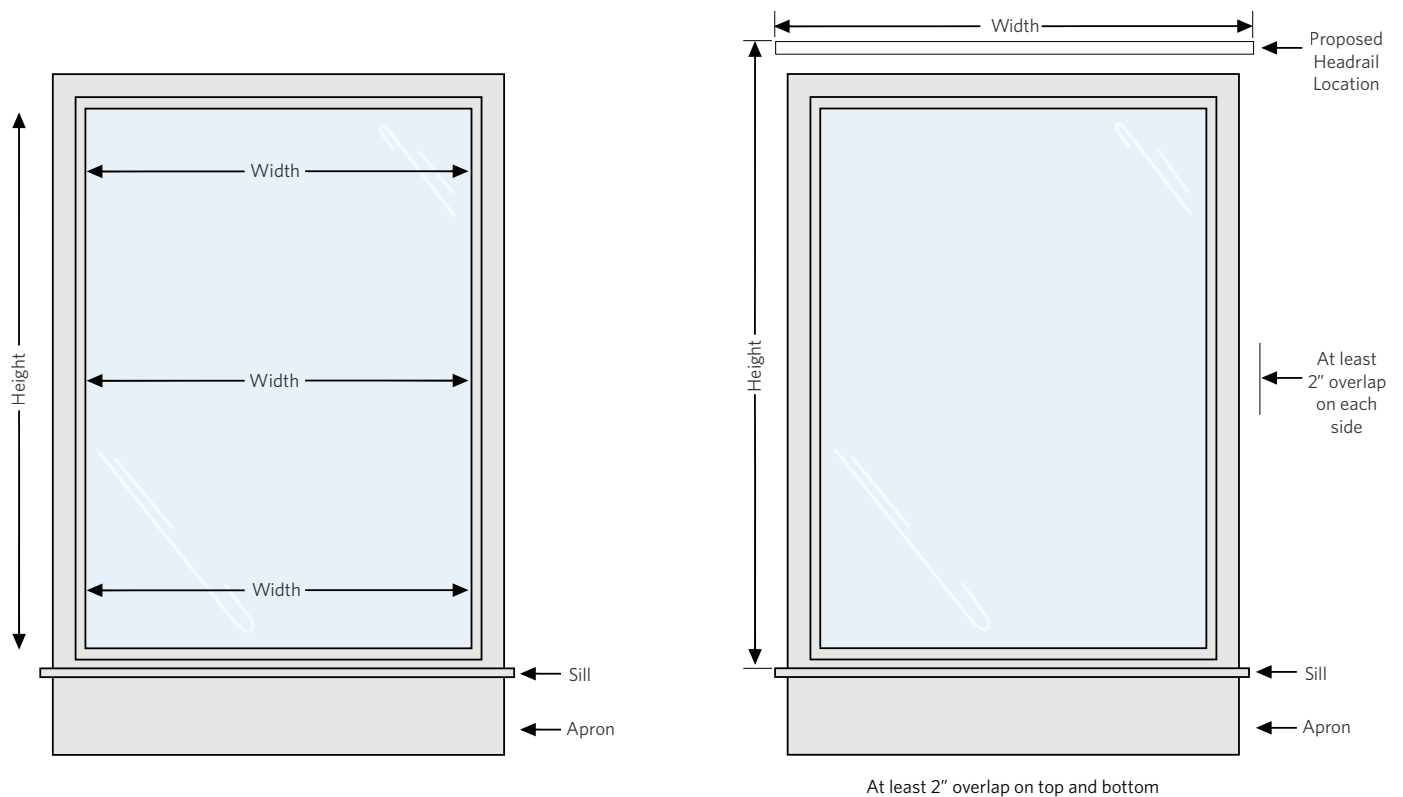

INTERNAL MOUNT

- Measure inside width of window casing at top of window (this measurement is critical because headrail must fit)
- Measure inside height from top of window casing to top of sill in three places, record longest measurement
- Choose width at least 3/8" smaller than the window (round down to the nearest inch)

EXTERNAL MOUNT

- Measure width to be covered
- Measure height to be covered from top to desired length, record measurement
- 2" overlap on each side of window is recommended for optimum light control and privacy