

# REJUVENATION


## Template For Tubelatch Entry Set

**CALIFORNIA PROPOSITION 65 WARNING:** This product contains brass hardware components which contain lead, a heavy metal known by the State of California to cause cancer, birth defects, or other reproductive harm.

**Installation note:** Power tools are not to be used when installing  
**Step 1**

Installing the Latches


Install latches as shown in Fig 1, install spindle until it stops. When spindle is in position install rubber O-ring on to spindle Fig 2

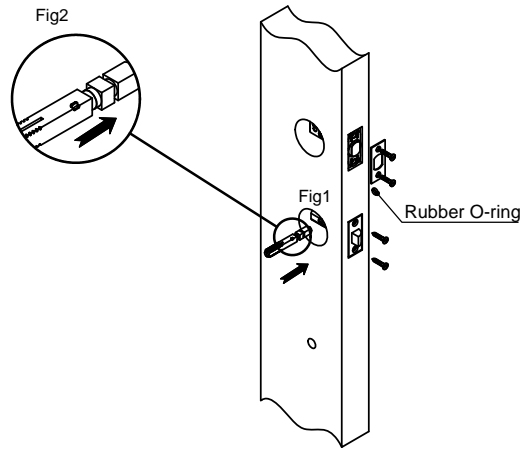

**Step 2**


Installing the Brackets and exterior trim.

Install brackets as shown in Fig 3, Make sure arrow is pointing up. Secure with provided fasteners.

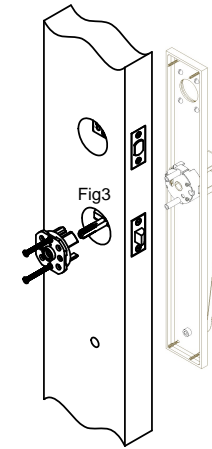

**Step 3**


Install the exterior trim using the supplied castle nut and castle nut wrench and screws. Secure the cylinder and plate in Fig 4 using the provided fasteners and interior trim mounting plate (note: fasteners should be snug, but not over-tight). Make sure the tail piece of the cylinder is in the vertical position.

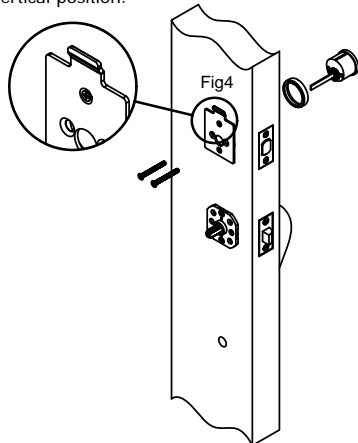

**Step 4**

Installing the interior plate. Install plate as shown in Fig 5.

With the interior plate, position it over the trim and align the spindle hole over the spindle. Secure with supplied castle nut, wrench and screws.

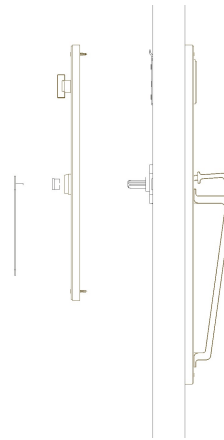

**Step 5**

Install the doorknobs or levers by turning them by sliding them onto the spindle. Secure knob by tightening the set screws.

Align knob on spindle so that set screws seat in grooves in spindle. Note: The doorknob should fit closely to the collar on the doorplate but with a small amount of play so that the doorknob does not bind when turned.

