

installation instructions

Step 1-Installing the latches and spindle

O-ring on to spindle Detail A.

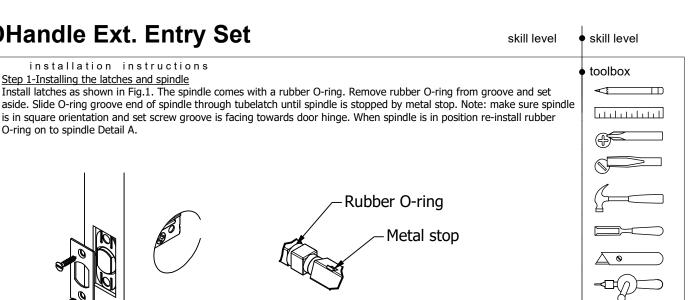

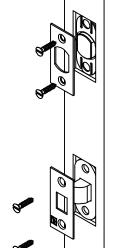









DETAIL

Step 2-Installing the brackets

The dhandle bracket is designed to provide added securement for the Dhandle plate. This should be installed roughly 9 7/8th inches (9.88) straight down from center of bottom door bore. Fig 2.


Rubber O-ring

Set Screw groove


door hinge.


Spindle will have groove on both ends install spindle so that groove is facing towards

The door handle bracket is designed to allow the knob/lever to turn in one direction only. There is a male and female half. The female half comes pre-attached to Dhandle trim and the male half should be installed on interior side of door. Make sure arrow on handle bracket is pointing up. Secure handle bracket with provided fasteners then use provided set screw and allen wrench to secure dhandle plate to dhandle

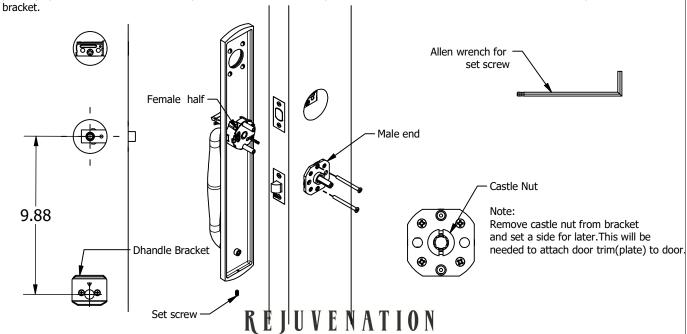

2550 N.W. Nicolai Street, Portland Oregon 97210 Customer Service: 888-401-1900 rejuvenation.com

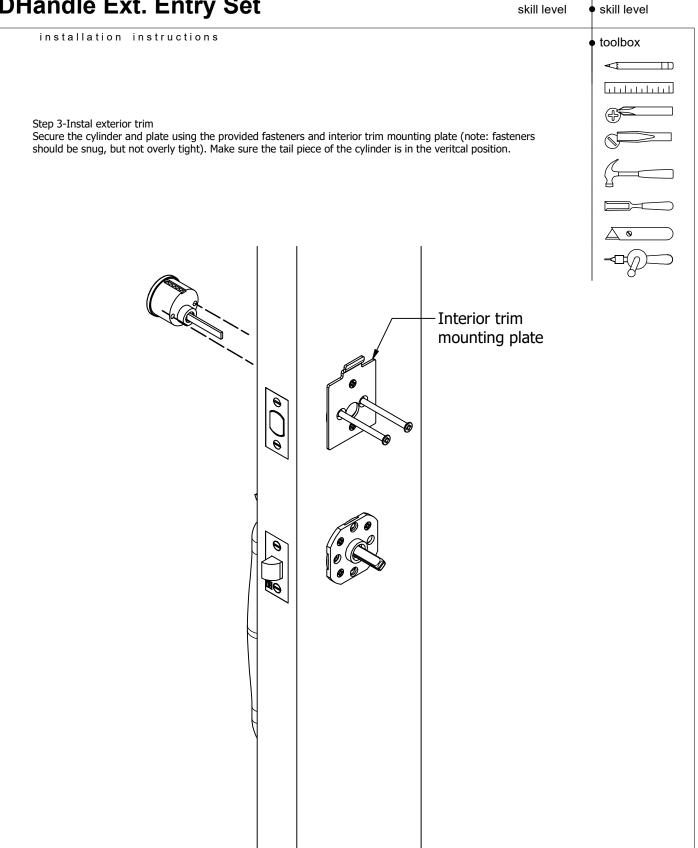


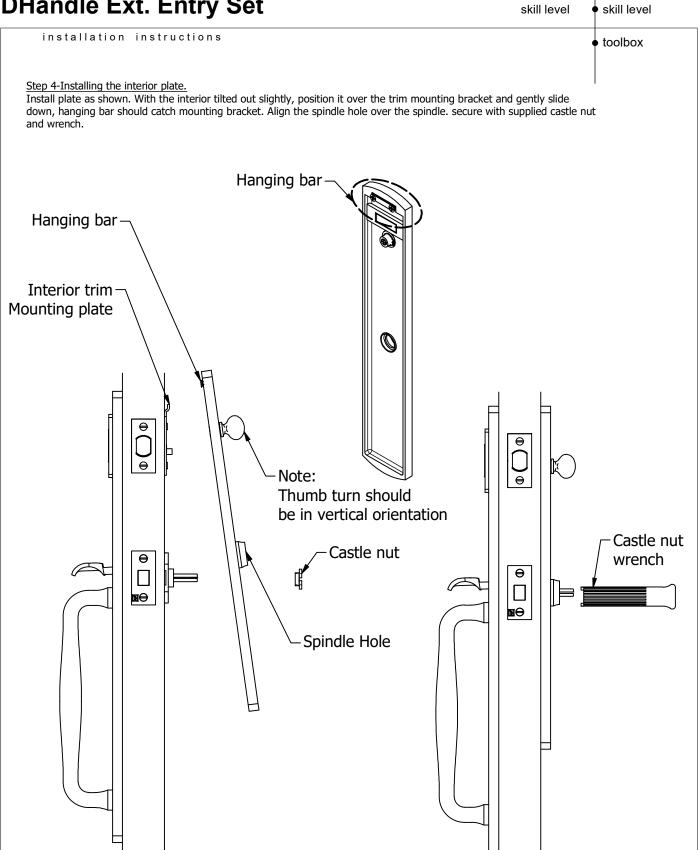

2550 N.W. Nicolai Street, Portland Oregon 97210 Customer Service: 888-401-1900 rejuvenation.com

installation instructions

Step 5- Installing handle(s)
Install the door knob or lever by matching the spindle orientation with square oriention on the handle. Secure handle by tightening the set screw. Align handle on spindle so that set screws seat in groove in spindle. Note: the handle should fit closely to the collar on the doorplate but with a small amount of play so that the handle does not bind when turned.

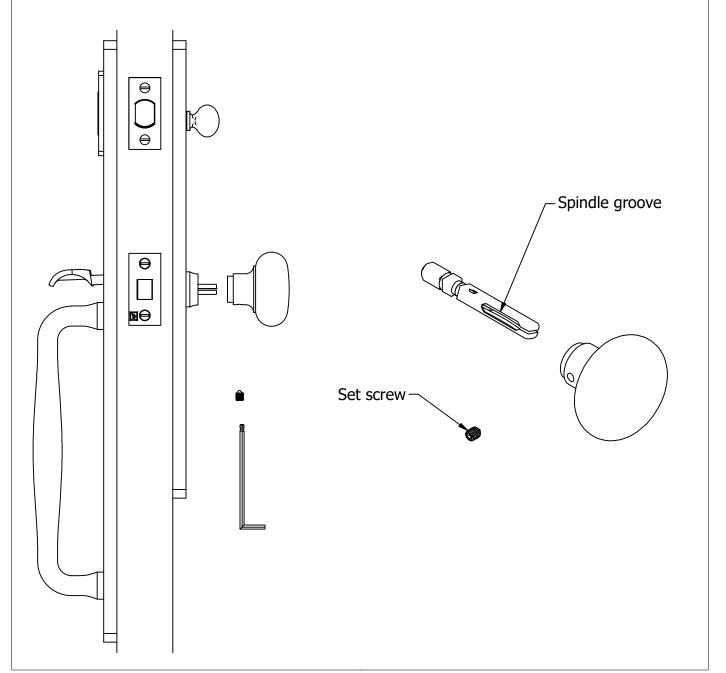

2550 N.W. Nicolai Street, Portland Oregon 97210 Customer Service: 888-401-1900 rejuvenation.com