



REJUVENATION

Template For Tubelatch Knob/Knob or Lever/Lever Entry Set

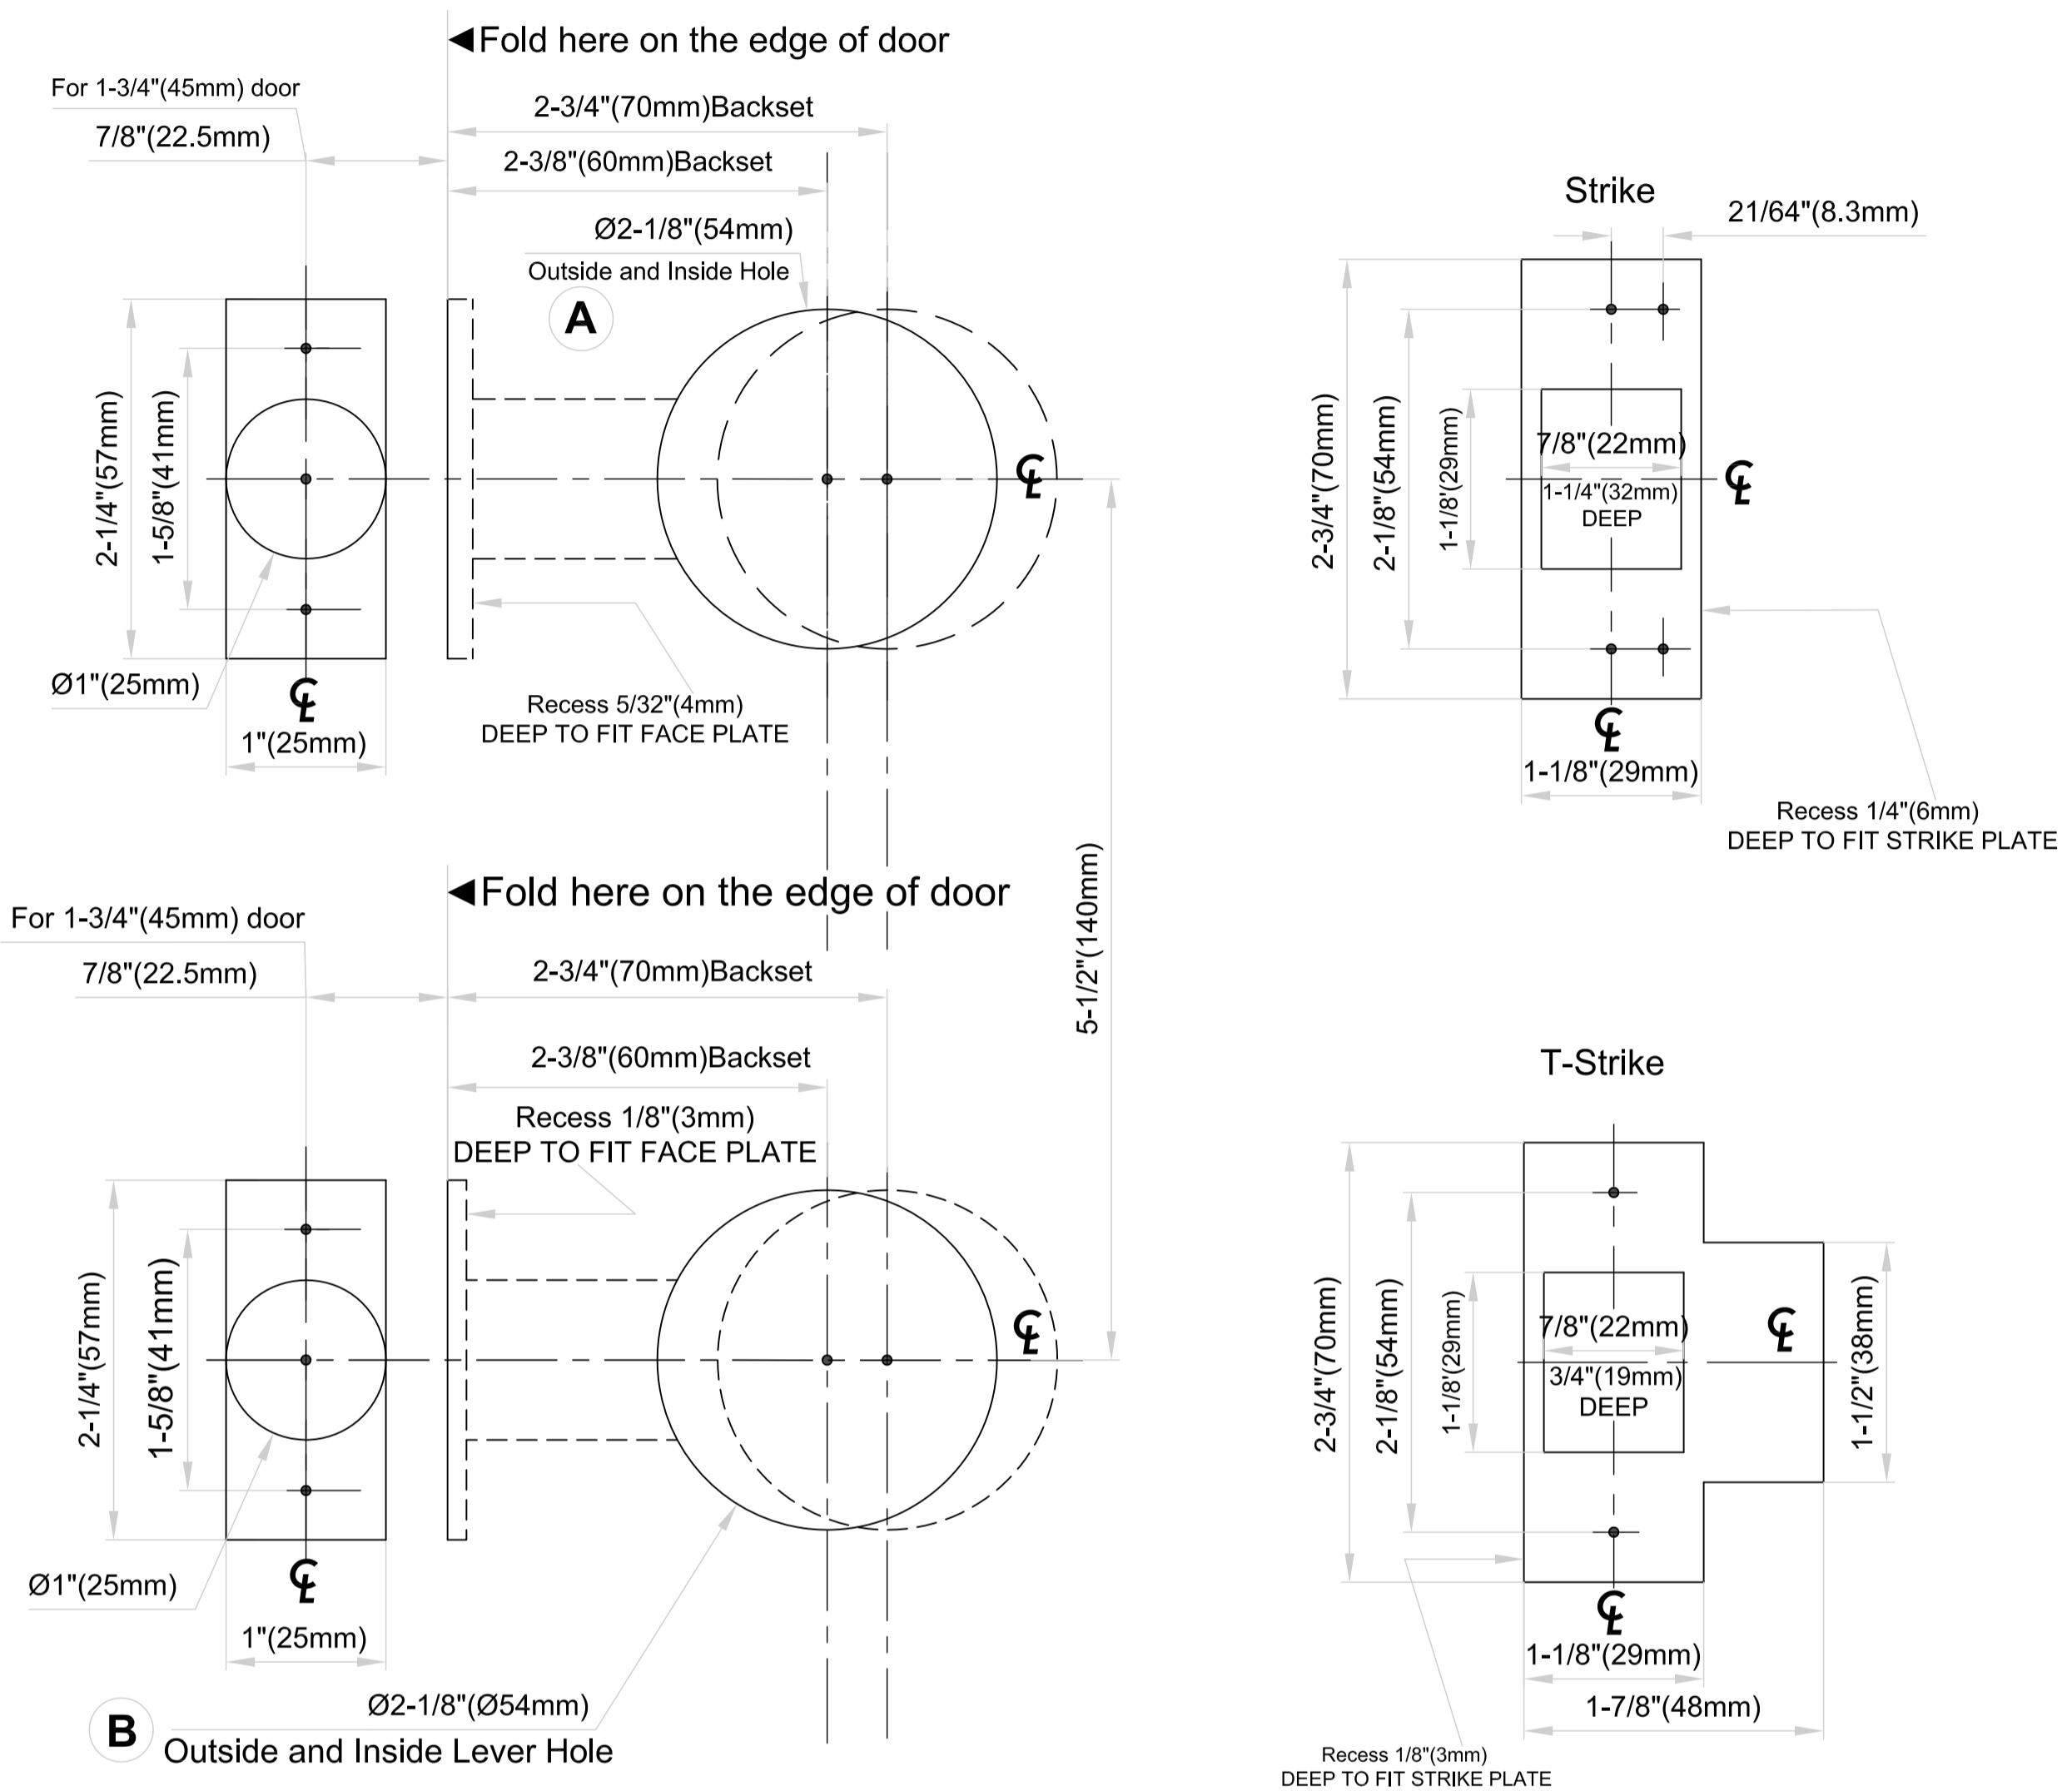

Tubular latch	Backset	Case Side
Tubelatch	2-3/8" (60mm)	2-61/64" (75mm) x 11/16" (18mm) x 7/8" (22mm)
Tubelatch	2-3/4" (70mm)	3-3/8" (85mm) x 11/16" (18mm) x 7/8" (22mm)
Deadlatch	2-3/8" (60mm)	3-3/8" (85mm) x 15/16" (24mm) x 15/16" (24mm)
Deadlatch	2-3/4" (70mm)	3-3/4" (95mm) x 15/16" (24mm) x 15/16" (24mm)

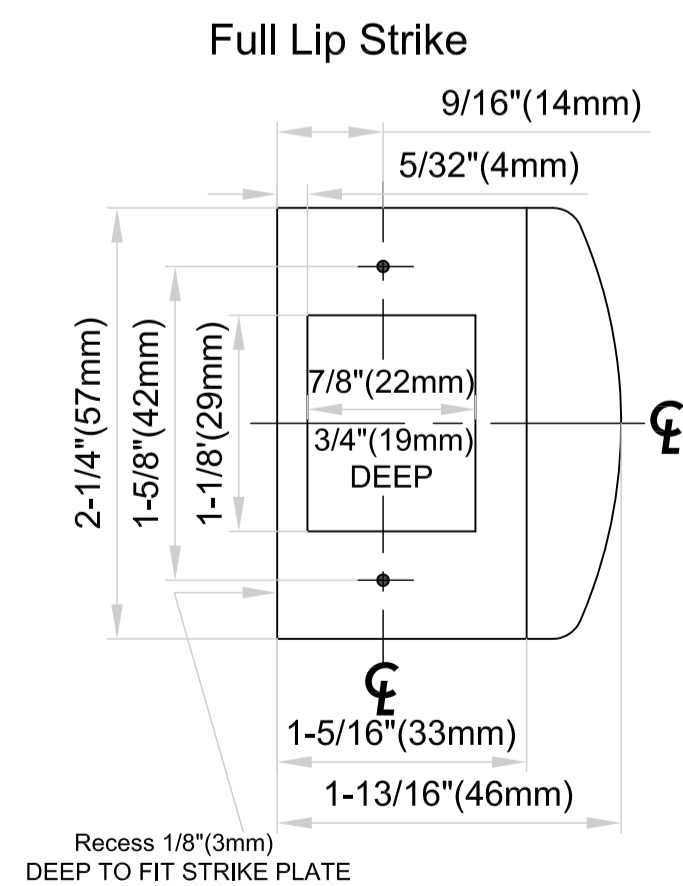

Door preparation using template supplied.

Please read the Installation Instruction Carefully before drilling any holes on the door.

Choose the correct holes to drill for the corresponding functions.

Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.