

# Electric Doorbell Chimes

skill level • basic electrician

## installation information

### Wiring

This chime can be operated by two buttons. In a typical installation, the two note signal is used for front door, and the one note signal is used for back or side door.

See wiring diagram below for correct installation.

If this is a new installation, the chime circuit will need to be wired using a minimum of 18 gauge wire.

### Transformer

This chime is furnished with the required 16 volt transformer

If using a transformer that is already installed, verify that voltage is compatible.


### Transformer Installation

Make wiring connections in accordance with local electrical codes.

The connections between the transformer and house 110-115 line voltage must be made inside a junction box

The transformer is made to mount in a knock-out

The best location for the transformer will depend on the structure; a basement or attic is typical. Ideally the transformer should be located centrally between button and chime.

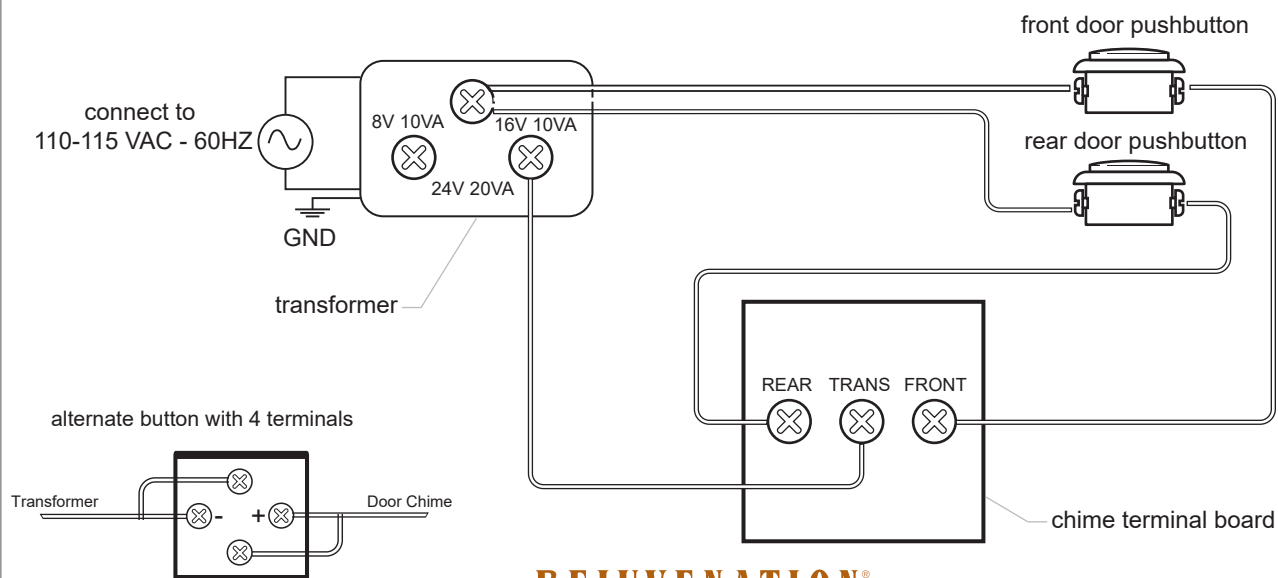

**REJUVENATION®**

2550 N.W. Nicolai Street, Portland Oregon 97210 Customer Service: 888 401-1900 rejuvenation.com