Winston 24" Installation Intructions

skill level

moderate

toolbox

installation instructions

1. Remove bottom finial, fold down light socket arms, and remove bottom of 2 locknuts from bottom all thread. NOTE: Be sure to rotate arms 90° down. Rotating left or right can unscrew arms from hub or twist and damage wires.




2. Maneuver socket arms through the shade opening directing the threaded post end through the shade spider hole and then fold socket arms back up.

See separate sheet (Z9661) for canopy installation.

- 3. Adjust locknuts to secure shade in place so bottom all thread barely extends out of the bottom of the shade.
- 4. Center diffuser on threaded post and install finial on exposed threaded post end.
- 5. Install diffuser in bottom of shade pushing it into shade to rest on bottom lip, edges should rest on lip inside shade.

To remove diffuser push up on one side and maneuver the other side out of the shade lip.

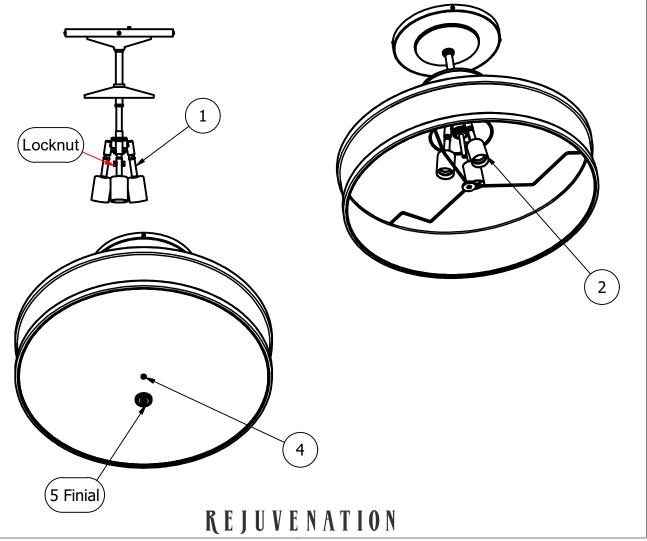


2550 N.W. Nicolai Street, Portland Oregon 97210 Customer Service: 888-401-1900 rejuvenation.com

toolbox

Please read before installing your fixture!

CALIFORNIA PROPOSITION 65 WARNING: This product contains brass hardware components which contain lead, a heavy metal known by the State of California to cause cancer, birth defects, or other reproductive harm.

- 1. Before removing the old fixture or installing the new fixture, shut off the power to the electrical box by removing the fuse or shutting off the circuit breaker for that circuit.
- 2. Fixture wires must be connected to the appropriate house wires black fixture wire to black (power) house wire and white fixture wire to white (neutral) house wire. If your fixture has lamp cord wire, connect the smooth fixture wire to the black (power) house wire and connect the fixture wire with the ridges along the outer edge to the white (neutral) house wire.

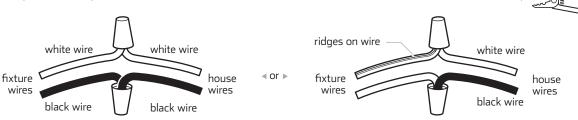

- 3. If your fixture has a bare ground wire, where you connect it depends on the wiring in your house. Never connect it to a current carrying wire. If your house has **metal** electrical boxes, connect the fixture ground wire to the green ground screw on the crossbar. If your house is newer or has been rewired and has plastic electrical boxes, connect the fixture ground wire to the house ground wire. If your fixture does **not** have a ground wire, your house ground wire can be connected directly to the crossbar using the green screw installed on the crossbar.
- 4. If your fixture has a switch in the canopy, connect one switch wire to the black (power) wire of the house, and the other to the black wire(s) from the fixture.
- 5. Leave no bare wires exposed after installation (except the bare ground wire, if any). Stripped ends of joined wires must be completely covered by wire nuts. Make sure that you do not damage the fixture wire insulation or the house wire insulation during installation.
- 6. Do not leave any wires in contact with sharp metal edges.
- 7. When installing shades, do not over-tighten the screws holding them. The shade should be held securely, but still be able to be turned in the shade holder.
- 8. Only use light bulbs of the correct type and no greater wattage than specified for your fixture. Using higher wattage bulbs or certain "decorator" type bulbs will shorten the life of the fixture and may create a fire hazard.
- 9. Turn off the power to the fixture at the wall or canopy switch before installing light bulbs.
- 10. If your fixture has become slightly misaligned during shipping you can often "tweak" it back into alignment with a gentle twist. If this doesn't work, give us a call for further advice.
- 11. If your fixture has a UL Wet Location Rating, additional precautions need to be taken. Fixtures with glass shades must be installed shade up. All supplied rubber washers must be installed between screw heads and the fixture canopy. After installation, all wet location fixtures must be caulked with suitable RTV or silicone caulking around the top, sides and bottom of the fixture where they contact the wall, and the top sides, and bottom of the joint between the canopy and the body of the fixture.

Drain holes in fixture should be routinely cleaned to prevent an accumulation of water.

Materials Needed

- Wire connectors (not supplied the size depends on the number and size of the wires being joined).
- Crossbar mounting screws. These should be supplied with the electrical box. If you need to replace them try 8-32 x 1/2".
 - * If you have any doubts about how to install a light fixture, or if a fixture fails to operate properly, please contact a local licensed electrician.



switch